


omega.com
Ω OMEGA

STCTX SERIES

Industrial Thermocouple Connector/Transmitter

INSTRUCTION
SHEET

M3935A/0704

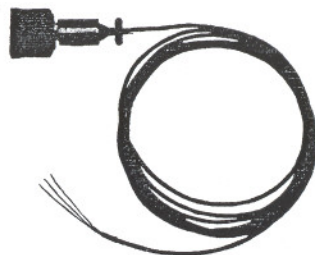

General Description

The OMEGA® STCTX Series is a medium performance, low cost, Industrial TC (Thermocouple) Connector/Transmitter. The STCTX features an encapsulated micro miniature signal conditioner built into a Universal Thermocouple Connector that converts the microvolt signal from a thermocouple sensor or probe across a dedicated temperature range to an industry standard 2-wire, 4 to 20mA analog output. This analog output can be sent hundreds of feet away from the location of your sensor (probe) to an indicating device, controller, PLC, computer, datalogger or chart recorder. Your STCTX Connector/Transmitter has been factory calibrated to provide maximum performance and requires no field adjustments.

Note: Patents & Patents Pending

Unpacking

Remove the packing list and verify that you have received all of your OMEGA equipment. If you have any questions about the shipment, please call Customer Service at:

1-800-622-2378 or 203-359-1660. On the web you can find us at:
www.omega.com e-mail: cservice@omega.com

When you receive the shipment, inspect the container and equipment for any signs of damage. Note any evidence of rough handling in transit. Immediately report any damage to the shipping agent.

NOTE

The carrier will not honor any damage claims unless all shipping material is saved for inspection. After examining and removing contents, save packing material and carton in the event reshipment is necessary.

The following items are supplied in the box with your STCTX Connector/Transmitter.

- This User's Manual, # M3935A (1 ea.)
- Probe/Connector Locking Clips (2 ea.)

STCTX Series Industrial Thermocouple Connector/Transmitter

STCTX Series Thermocouple Connector/Transmitter Models Available

Model No.	Description	Range
STCTX-J1	with Universal Connector	-18 to 121°C (0 to 250°F)
STCTX-J2	with Universal Connector	-18 to 538°C (0 to 1000°F)
STCTX-K1	with Universal Connector	-18 to 121°C (0 to 250°F)
STCTX-K2	with Universal Connector	-18 to 538°C (0 to 1000°F)
STCTX-K3	with Universal Connector	-18 to 1093°C (0 to 2000°F)
STCTX-T1	with Universal Connector	-18 to 121°C (0 to 250°F)
STCTX-T2	with Universal Connector	-18 to 399°C (0 to 750°F)

SPRXTX Series RTD Connector/Transmitter Models Available

Model No.	Description	Range
SPRXTX-S1	with Standard Size Connector	-99 to 208°C (-146 to 406°F)
SPRXTX-S2	with Standard Size Connector	2 to 569°C (36 to 1056°F)
SPRXTX-M1	with Miniature Size Connector	-99 to 208°C (-146 to 406°F)
SPRXTX-M2	with Miniature Size Connector	2 to 569°C (36 to 1056°F)

Recommended Accessories

Regulated Power Supply, OMEGA® Part No.: PSR-24L
Shielded 2-conductor cable (100 ft), OMEGA® Part No.: TX2-100

Introduction/Safety

Your STCTX Thermocouple Connector/Transmitter has been designed for ease of use and flexibility. It is important that you read this users manual completely and follow all safety precautions before operating your unit.

Precautions

1. FOLLOW ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS OUTLINED IN THIS MANUAL.
2. INSURE PROBE/CONNECTOR SAFETY CLIPS ARE ALWAYS INSTALLED DURING USE.
3. ADD ADDITIONAL SAFE GUARDS TO YOUR SYSTEM IN CRITICAL APPLICATIONS WHERE DAMAGE OR INJURY MAY RESULT FROM PROBE/CONNECTOR SEPARATION OR FAILURE.
4. NEVER EXPOSE THE CONNECTOR/MODULE BODY TO AMBIENT TEMPERATURES ABOVE 85°C (185°F) OR BELOW -40°C (-40°F). DAMAGE MAY RESULT.
5. DO NOT OPERATE IN FLAMMABLE OR EXPLOSIVE ENVIRONMENTS.
6. DO NOT USE IN HUMAN, MEDICAL, OR NUCLEAR APPLICATIONS.
7. NEVER OPERATE WITH A POWER SOURCE OTHER THAN WHAT IS SPECIFIED IN THIS MANUAL.
8. REMOVE AND/OR DISCONNECT POWER SOURCE BEFORE ATTEMPTING INSTALLATION OR MAINTENANCE.
9. ALWAYS OPERATE YOUR UNIT WITH THE SHIELD WIRE CONNECTED TO EARTH GROUND.
10. INSTALLATION AND WIRING SHOULD BE DONE BY TRAINED PROFESSIONALS ONLY.
11. DO NOT OPEN OR DISASSEMBLE YOUR UNIT.

NOTE

There are no user serviceable parts inside your unit. Attempting to open, repair or service your unit will void your warranty.


Theory of Operation

A 4 to 20 mA loop is a series loop in which a transmitter will vary the current flow depending on the input to the transmitter. With the STCTX the amount of current allowed to flow in the loop will vary depending on the microvolt change, due to changes in the temperature being measured by the thermocouple sensor (probe). Some advantages of a current output over a voltage output is that the signal measured is less susceptible to electrical noise interference and the loop can support more than one measuring instrument as long as the maximum loop resistance is not exceeded.

A typical application utilizing a current loop will normally consist of a power supply, the transmitter and a meter, recorder or controller to measure the current flow. The loop resistance in the sum of the measuring instruments and wire used. The maximum allowable loop resistance for the STCTX to function properly is found by using the following formula:


$$R_{max} = (\text{power supply voltage} - 9 \text{ volts}) / .02 \text{ amps}$$

For applications that require a voltage output, the 4 to 20mA signal from the STCTX can be converted in the field by adding a 250 Ohm shunt resistor that will convert the transmitters output to a 1 to 5 Vdc signal when wired correctly. See "Transmitter Wiring Examples" in this manual.

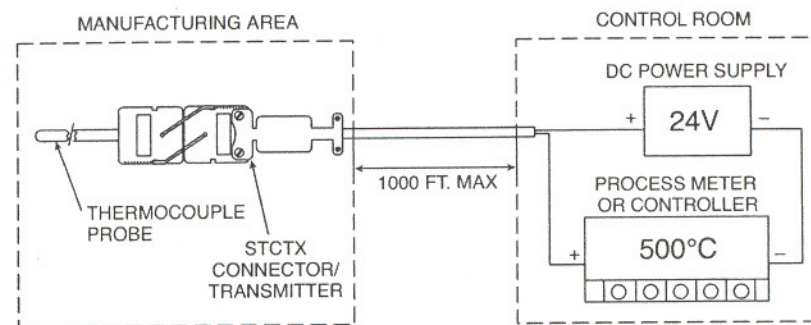


Mounting Your STCTX to Probes

The STCTX Series Connector/Transmitters are designed for quick connection to Thermocouple sensors and probes. The STCTX will connect to all industry Thermocouple probes that feature "Omega Style" standard or miniature male connectors such as Omega OST-K-M standard size connector or SMP-K-M miniature size connector. See below for correct usage.

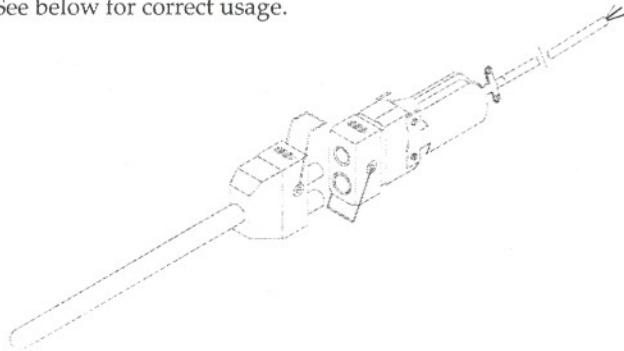

Probe locking Clips


Probe locking clips are also provided to help secure your probe to the STCTX Connector/Transmitter.

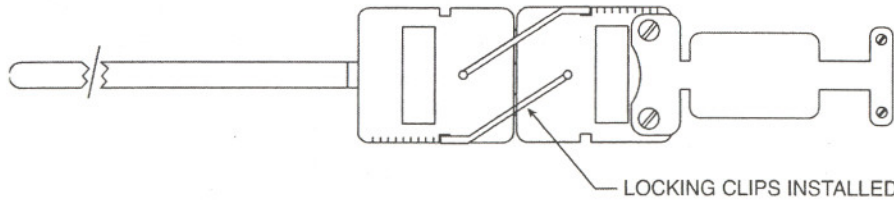


CAUTION

Although your STCTX Connector/Transmitter will work with any Thermocouple sensor or probe, It is recommended that you use only OMEGA® Thermocouple probes with you STCTX unit to insure proper installation and use of the probe locking clips. Probe locking clips are provided to offer added protection against the separation of your probe and connector/transmitter. In critical applications where separation of the Thermocouple probe from the connector/transmitter during normal operation could cause damage or harm, it is recommended that you install additional safety and locking devices to prevent the units from separating and/or shutting down your process.

Transmitter Wiring Examples 4 to 20mA Output (2-wire)

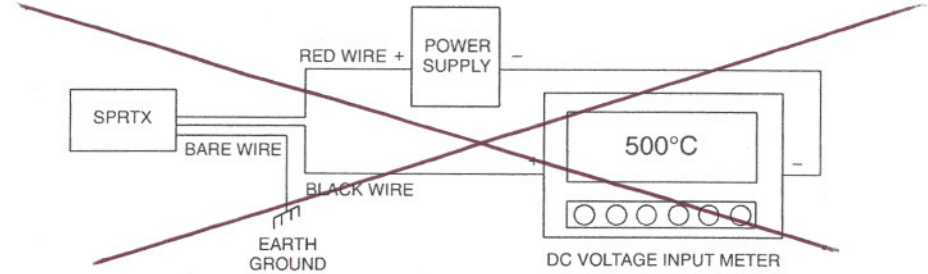


Converting from 4 to 20mA Output to 1 to 5Vdc Output (3-wire)

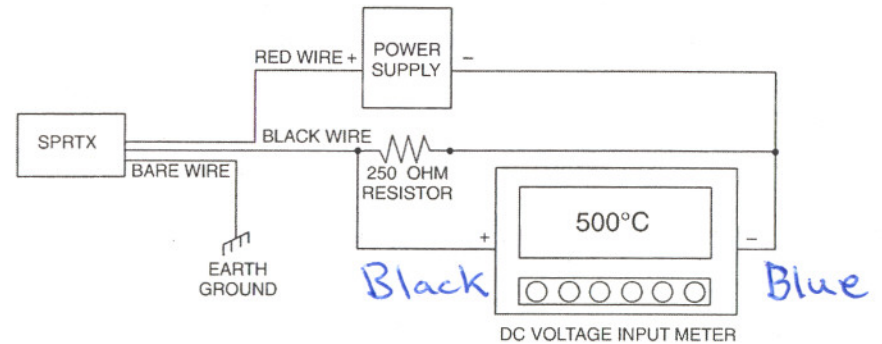

Protection from High Ambient Temperatures

Note: Your STCTX Connector/Transmitter Assembly can be damaged if exposed to ambient temperatures above 85°C (185°F). Some applications may require that you shield the STCTX unit from radiated heat as shown below. You should always use a probe where the length allows for a safe distance of 76 mm (3") or more between the body of the STCTX and your source of heat.

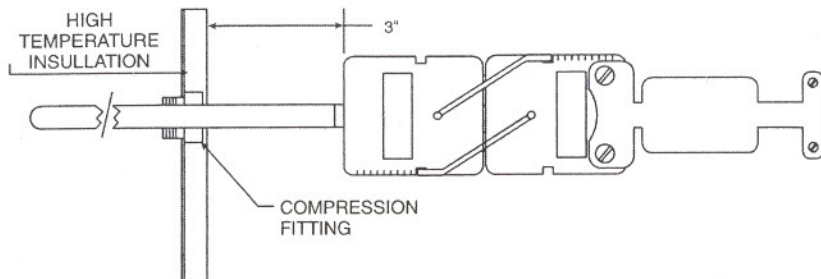

Calibration/Service

Your transmitter has been factory calibrated to meet or exceed the specifications outlined in this manual. No field adjustments are needed or possible on your unit. If your unit should become damaged or malfunction, please contact Omega Customer Service at:

1-800-622-2378 or 203-359-1660. On the web you can find us at:
www.omega.com e-mail: cservice@omega.com

Specifications

Temperature Input Range by model

STCTX-J1, -K1, -T1	-18 to 121°C (0 to 250°F)
STCTX-J2, K2	-18 to 538°C (0 to 1000°F)
STCTX-T2	-18 to 399°C (0 to 750°F)
STCTX-K3	-18 to 1093°C (0 to 2000°F)

Accuracy:

±0.25% of full scale @ 23°C (referenced to a linear mV input signal) plus ±0.25% of full scale @ 4mA, or 1% full scale @20mA

NOTE

Thermocouple signals are non-linear. Your STCTX provides amplification, not linearization. You must take into account the non-linearity and inaccuracy of your thermocouple sensor to calculate your combined system accuracy.

Repeatability:	± 0.25°C (0.5°F)
Output Stability/Temp Drift:	± 0.002mA/°C
Max Ambient Temperature:	-40 to 85 °C (-40 to 185°F)
Output:	2-Wire, 4 to 20mA
Power Supply:	Regulated 9 to 24 Vdc @ 30mA max
Max Loop Resistance:	Ohms = (V supply - 9 V) / .02 A
Sensor Input Type:	Ungrounded Thermocouple (J, K, T)
Open Sensor Indication:	Output goes below 4 mA (see note below)
Connector Style/Material:	Omega Model UST (Glass Filled Nylon)
Dimensions	79 x 18 x 24 mm (3.12 L x 0.70 W x .96"
Weight	100 g (0.22 lb)

NOTE

Cable shield wire must be connected to earth ground for "Open Sensor Indication" to function correctly.

NOTE

The STCTX Series is not designed for use in medical or nuclear applications, nor flammable or explosive environments.

NOTE

Patents and Patents Pending

NOTES:



OMEGAnet® Online Service omega.com	Internet e-mail info@omega.com
---------------------------------------	-----------------------------------

Servicing North America:

U.S.A.: One Omega Drive, Box 4047
ISO 9001 Certified Stamford, CT 06907-0047
Tel: (203) 359-1660 FAX: (203) 359-7700
e-mail: info@omega.com

Canada: 976 Bergar
Laval (Quebec) H7L 5A1, Canada
Tel: (514) 856-6928 FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®
Customer Service: 1-800-622-2378 / 1-800-622-BEST®
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

Mexico: En Español: (001) 203-359-7803 e-mail: espanol@omega.com
FAX: (001) 203-359-7807 info@omega.com.mx

Servicing Europe:

Benelux: Postbus 8034, 1180 LA Amstelveen, The Netherlands
Tel: +31 (0)20 3472121 FAX: +31 (0)20 6434643
Toll Free in Benelux: 0800 0993344
e-mail: sales@omeganl.nl

Czech Republic: Frystavska 184, 733 01 Karviná, Czech Republic
Tel: +420 (0)59 6311899 FAX: +420 (0)59 6311114
Toll Free: 0800-1-66342 e-mail: info@omegashop.cz

France: 11, rue Jacques Cartier, 78280 Guyancourt, France
Tel: +33 (0)1 61 37 2900 FAX: +33 (0)1 30 57 5427
Toll Free in France: 0800 466 342
e-mail: sales@omega.fr

Germany/Austria: Daimlerstrasse 26, D-75392 Deckenpfrunn, Germany
Tel: +49 (0)7056 9398-0 FAX: +49 (0)7056 9398-29
Toll Free in Germany: 0800 639 7678
e-mail: info@omega.de

United Kingdom: One Omega Drive, River Bend Technology Centre
Northbank, Irlam, Manchester
M44 5BD United Kingdom
Tel: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622
Toll Free in Unrated Kingdom: 0800-488-488
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification. The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.
WARNING: These products are not designed for use in, and should not be used for, human applications.



WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC. © Copyright 2004 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.